

# RUGGED TABLET PC QUICK START GUIDE



[www.soten.com.cn](http://www.soten.com.cn)

 
# To Use This Manual

## Please Read the Instructions First.

Thank you for using our rugged tablet, which is built on the basis of Google Android operating system.

- Please read all safety precautions and this manual carefully before using the device to ensure safety and correct use.
- The description in this manual is based on the Default Setting of the device.
- The images and screenshots used in this manual may differ from the actual appearance of the product.
- The contents of this manual may differ from the product, service provider or software provided by service provider. Subject to change without prior notice.
- Available features and additional services may vary by device, software or service provider.
- The format and information in this manual are based on the Google Android operating system, which may be different.
- Applications and their functions may vary by country, region, or hardware specification. We are not responsible for performance issues caused by third party applications.
- We are not responsible for performance issues or incompatibilities caused by editing registry Settings of customers.
- The sound sources, wallpapers and images provided in this equipment are licensed for limited use by us and their respective owners. The use of these materials for commercial or other purposes is a violation of copyright law. We are not liable for such copyright infringement by our users.
- Additional charges may be incurred for sending and receiving messages, uploading and downloading, automatic synchronization or using location services. To avoid the additional charges, choose the right data charging plan. Contact your service provider for more information.
- Please keep this manual for future reference.

Comes with the Google™ APP and Google Chrome™  
Android is a trademark of Google LLC

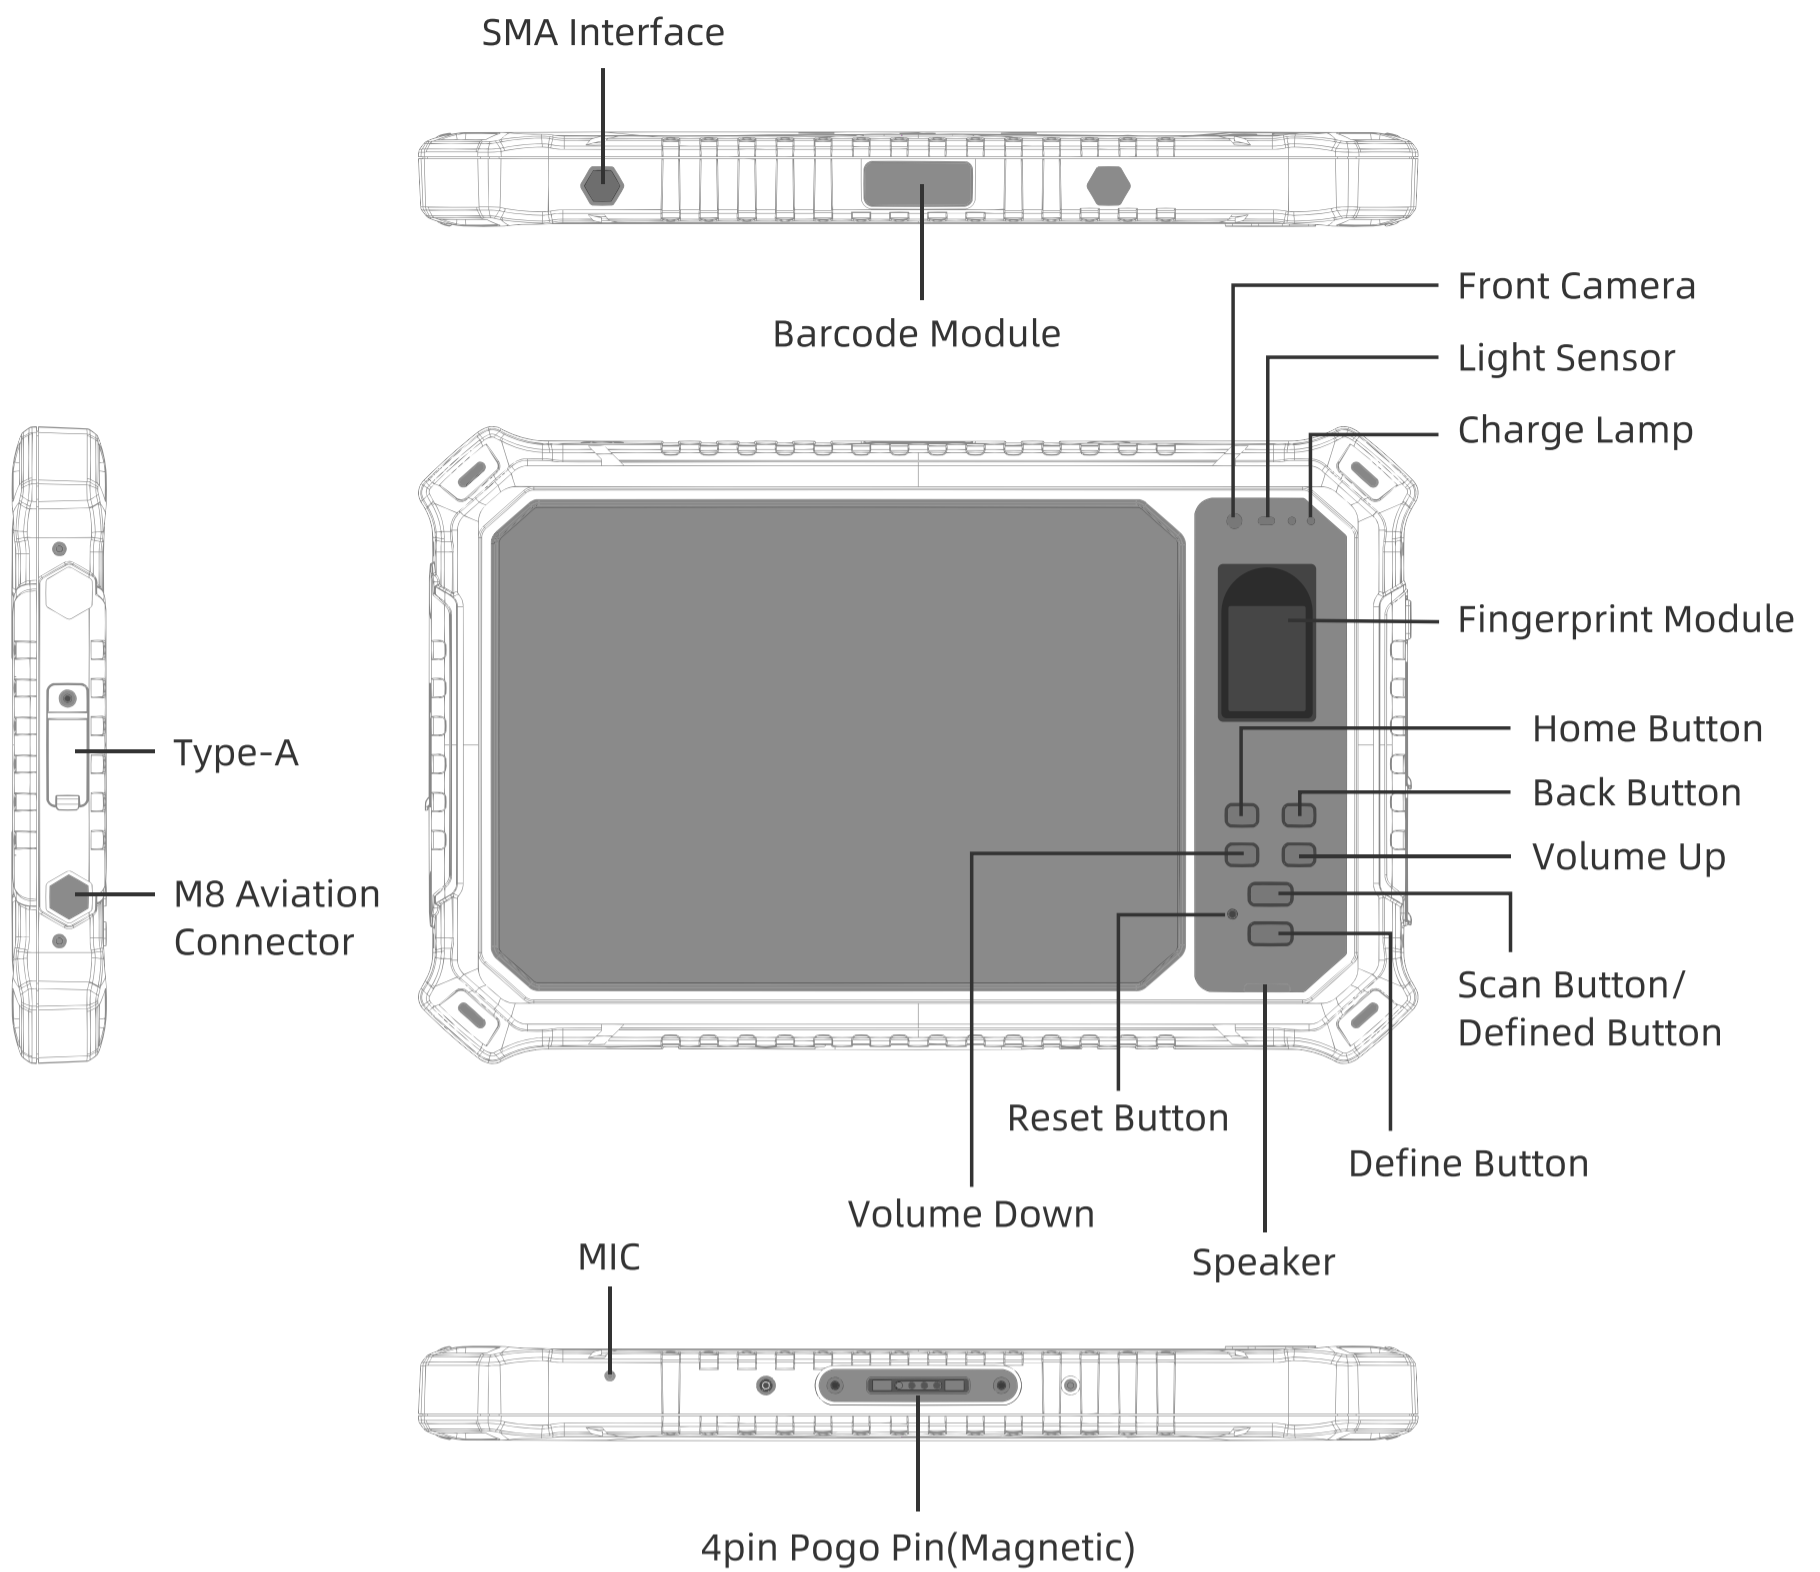


**Note:**

- Due to different user-selected configurations, it may not match the effect diagram.
- The specific model appearance may vary slightly.


# Accessories



 Magnetic Charging Cable

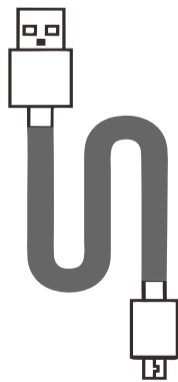


Type-C Cable

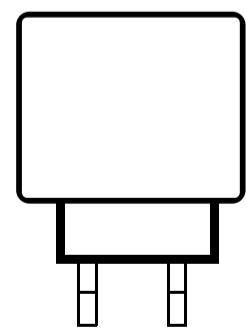 


Charger

 Comes with the Google™ APP and Google Chrome™  
 Android is a trademark of Google LLC

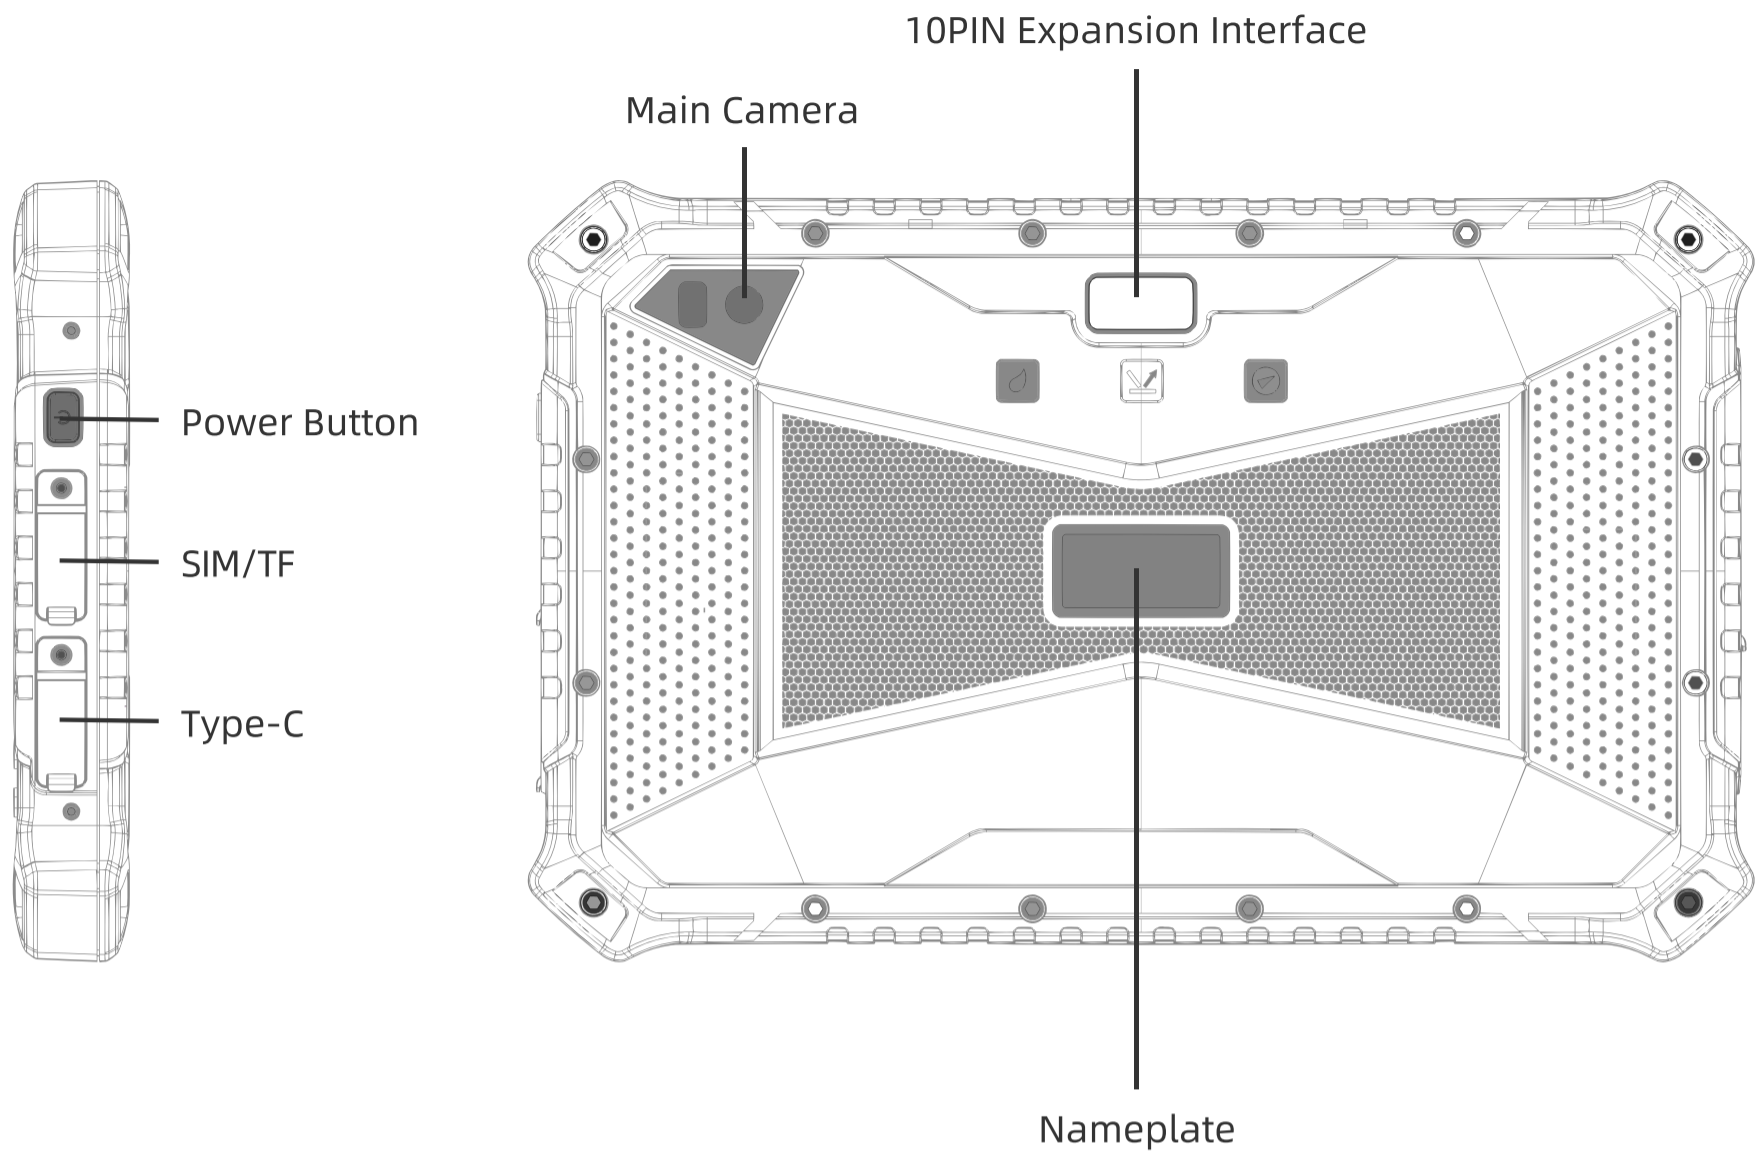


## Battery

 The device has a built-in battery, You can track your battery using the icon displayed at the top right of the screen.

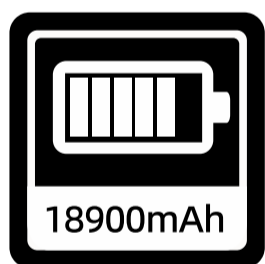

Polymer Battery

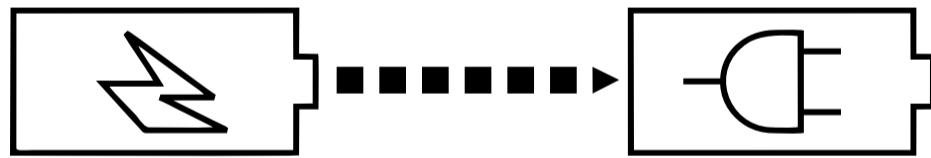 


## Warning

- Use only safety-certified battery designed specifically for your device.
- Battery incompatibility can cause serious injury or damage to the device.
- Never place battery or device on heating equipment s such as microwave ovens, stoves or radiators. An overheated battery may cause an explosion.

Comes with the Google™ APP and Google Chrome™  
Android is a trademark of Google LLC

# 1 How To Insert The Card

 To ensure comprehensive protection of the SIM card, this product features an embedded SIM card slot design, preventing damage to the SIM card. Always insert or remove the card slot after powering off the device. This device uses a Nano SIM card, so please confirm before inserting the card. Especially when installing an expandable storage TF card, the device must be powered off to avoid potential system issues.

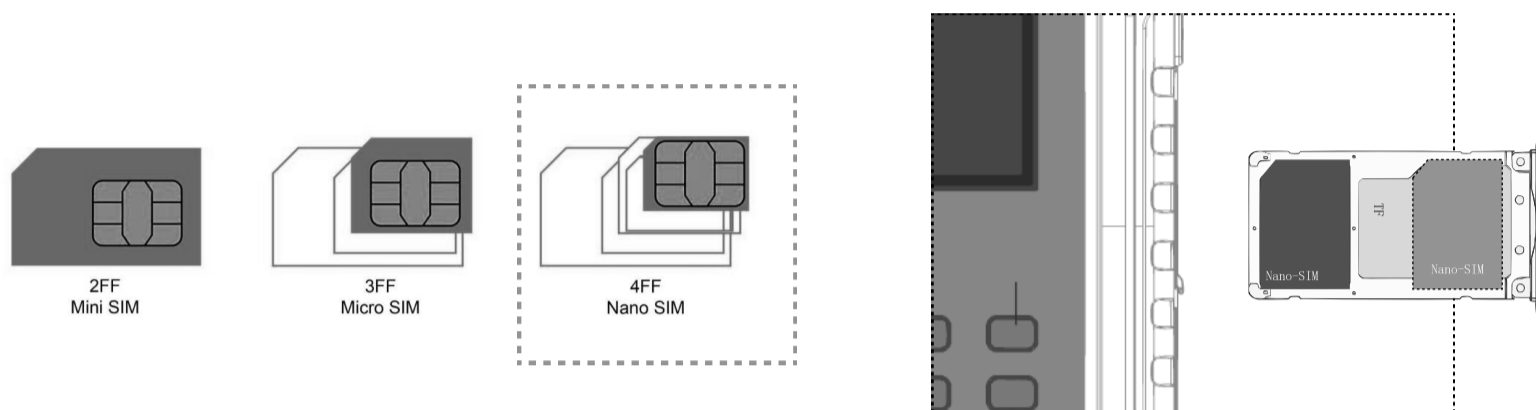

Power off the device » then open the protective card cover » Use a SIM card ejector tool to insert it into the small hole of the card slot » then remove the card slot » Place the Nano SIM card and TF storage card, ensuring that their diagonal corners align with the diagonal corners of the card slot » Finally, push the card slot back into place.

# 2 How To Boot

- A non-removable battery is installed inside the device.
- Long press the power button for 3-5 seconds to start.

# 3 How To Send SMS, MMS

## SMS

- Open the SMS app.
- Select new information.
- Enter your phone number or browse your contacts.
- Select edit information and enter your text.
- Send. ➤

## MMS

- When writing text messages, choose to add images, videos or other files you want to add, or even take new photos or videos right away.
- Select or send. ➤

Comes with the Google™ APP and Google Chrome™  
Android is a trademark of Google LLC

## 4 Language Switching Settings

- Main menu --settings-system setting--language and input method.
- Language and input method--language--adding language.
- Select the language you need, the system will automatically.
- Jump back to the language interface.
- Select the icon after the language bar and drag it to the first one.

## 5 Safety

- The maximum electromagnetic radiation absorption ratio (SAR), of this product is < 2.0W/kg.
- In line with the requirements of the national standard:  
EN 50360:2017, EN 50566:2017, EN62209-1:2016,  
EN 62209-2:2010, EN 62479:2010.

## 6 SAR

**To ensure safe use of the product, you must strictly abide by the following rules.**

- The device should be at least 15 cm away from any medical implant or adjuster and should never be carried in your coat pocket.
- Don't expose this device and other batteries to high-temperature or heating devices such as sunlight, heaters, microwaves, ovens or water heaters. An overheated battery may cause an explosion.
- When charging is complete or not, the charger should be disconnected from the device and removed from the power outlet. Don't charge the device in an explosive environment.
- The device is equipped with a non-removable battery. Don't replace the battery by yourself to avoid damaging the battery or the device.
- Use of unapproved or incompatible power supplies, chargers or batteries may cause fire, explosion or other hazards. We are not responsible for any accident caused by non-standard charging equipment.
- Don't drop, crush, scratch, or pierce the battery. Otherwise, it may be subjected to excessive external pressure, resulting in internal short circuit and overheating.
- Don't remove or reset the battery, insert other objects and soak in water or other liquids.

Comes with the Google™ APP and Google Chrome™  
Android is a trademark of Google LLC

## 7 Precautions For Battery Maintenance

- When the device is not in use for a long time, the battery capacity shall not be lower than 80%, especially when it is stored in low temperature in winter, and a complete charge and discharge shall be carried out once a month.
- When the battery is lower than 30%, charge it in time. The charging time is generally 4-8 hours. When the charger is not in use, remove it from the power socket.
- Don't connect a permanently charged battery to a charger, as overcharging can shorten battery life. Please handle the device gently when charging and wiring data transmission. Don't operate the device at this time except under special circumstances to avoid short circuit of the socket and damage to the control chip.
- Don't charge the device in a damp, flammable or explosive environment. Reasonable charge and discharge can prolong battery life.
- It is best to complete 3 complete charge and discharge cycles before use.

## 8 Additional Notes

- Fully understand the maintenance of the device to use it more safely and efficiently, and extend the service life of the device as far as possible.
- Please follow the instructions in the manual to open the device, remove the accessories, and don't try other methods.
- Please avoid falling, knocking or shaking the device. Rough handling of the device can cause the screen to crack, damaging internal circuit boards and fine construction.
- Don't use chemical solvents or detergents to clean your device. Wipe the case with a soft cotton cloth with water or mild soap.
- Clean lenses (e.g. camera lenses and screens) with a clean, dry and soft cloth.
- If you encounter abnormal malfunctions such as collisions during use and cannot use normally, please follow the steps below to troubleshoot: Press the reset button, and the device will force restart (unlock during restart) to resolve general issues.
- The touch screen of the device can be used normally in air and fog environment, but the sensitivity will be reduced in rain and snow environment.
- Don't use the device in heavy rain or snow except under special circumstances.
- After using the device in rainy or snowy weather, remove water on the surface and dry it in a cool place.
- In a strong light working environment, change the automatic brightness adjustment to manual brightness adjustment and maximum brightness adjustment. After the maximum brightness adjustment, there will be obvious heating and the working life will be significantly shortened. Please adjust the brightness of the display properly.
- Standard packaging of this product (Rugged Tablet/ USB cable/Charger/ Introduction manual/ Screen protector/ Magnetic Charging Cable/ Precautions Card/ Hand strap).