

HUBER  BK

R36

**RUGGED DATA COLLECTOR
HANDHELD QUICK START GUIDE**



www.soten.com.cn

 
Manual

Please read the instructions first.


Thank you for using our data collector handheld, which is built on the basis of Google Android operating system.

- Please read all safety precautions and this manual carefully before using the device to ensure safety and correct use.
- The description in this manual is based on the Default Setting of the device.
- The images and screenshots used in this manual may differ from the actual appearance of the product.
- The contents of this manual may differ from the product, service provider or software provided by service provider. Subject to change without prior notice.
- Available features and additional services may vary by device, software or service provider.
- The format and information in this manual are based on the Google Android operating system, which may be different.
- Applications and their functions may vary by country, region, or hardware specification. We are not responsible for performance issues caused by third party applications.
- We are not responsible for performance issues or incompatibilities caused by editing registry Settings of customers.
- The sound sources, wallpapers and images provided in this equipment are licensed for limited use by us and their respective owners. The use of these materials for commercial or other purposes is a violation of copyright law. We are not liable for such copyright infringement by our users.
- Additional charges may be incurred for sending and receiving messages, uploading and downloading, automatic synchronization or using location services. To avoid the additional charges, choose the right data charging plan. Contact your service provider for more information.
- Please keep this manual for future reference. DATA COLLECTOR HANDHELD


Comes with the Google™ app and Google Chrome™ .
Android is a trademark of Google LLC.

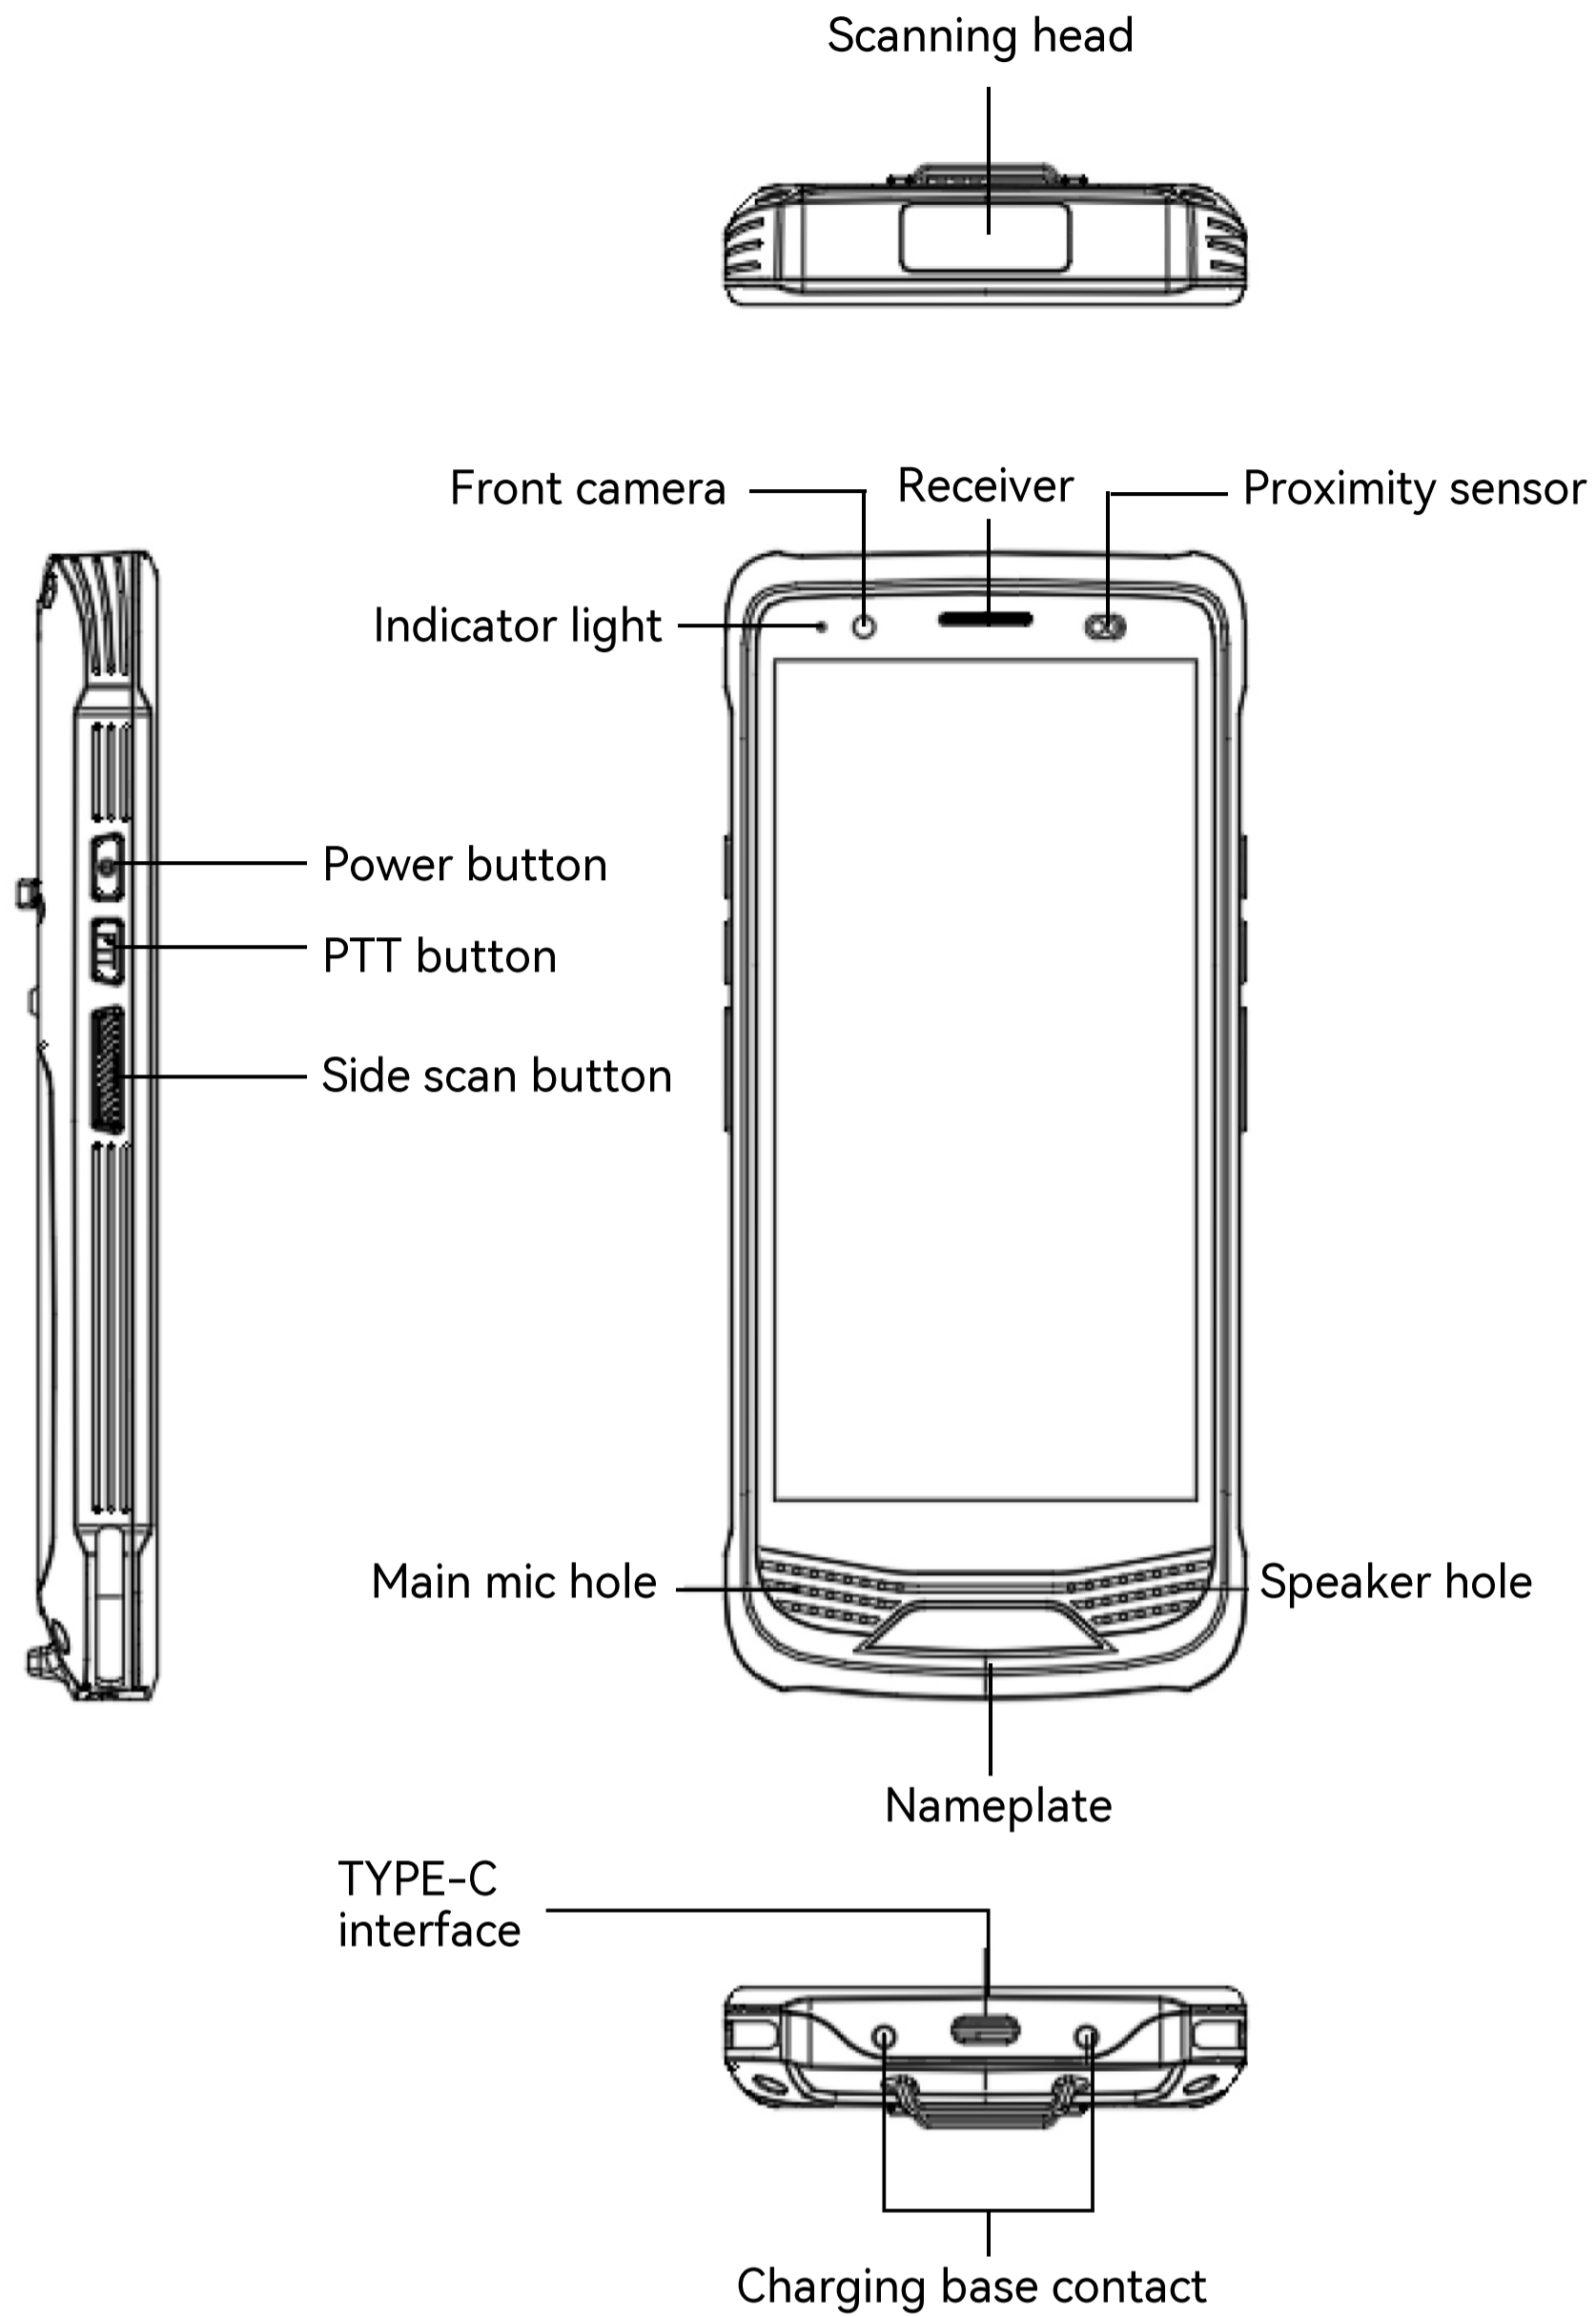

Accessories

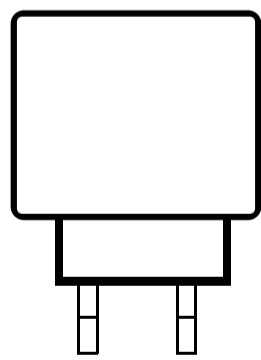 


Quick charger

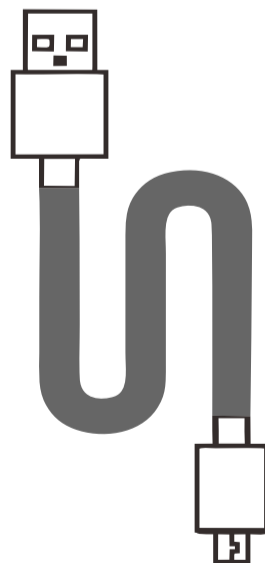 

Type-C cable


Comes with the Google™ app and Google Chrome™ .

 Android is a trademark of Google LLC

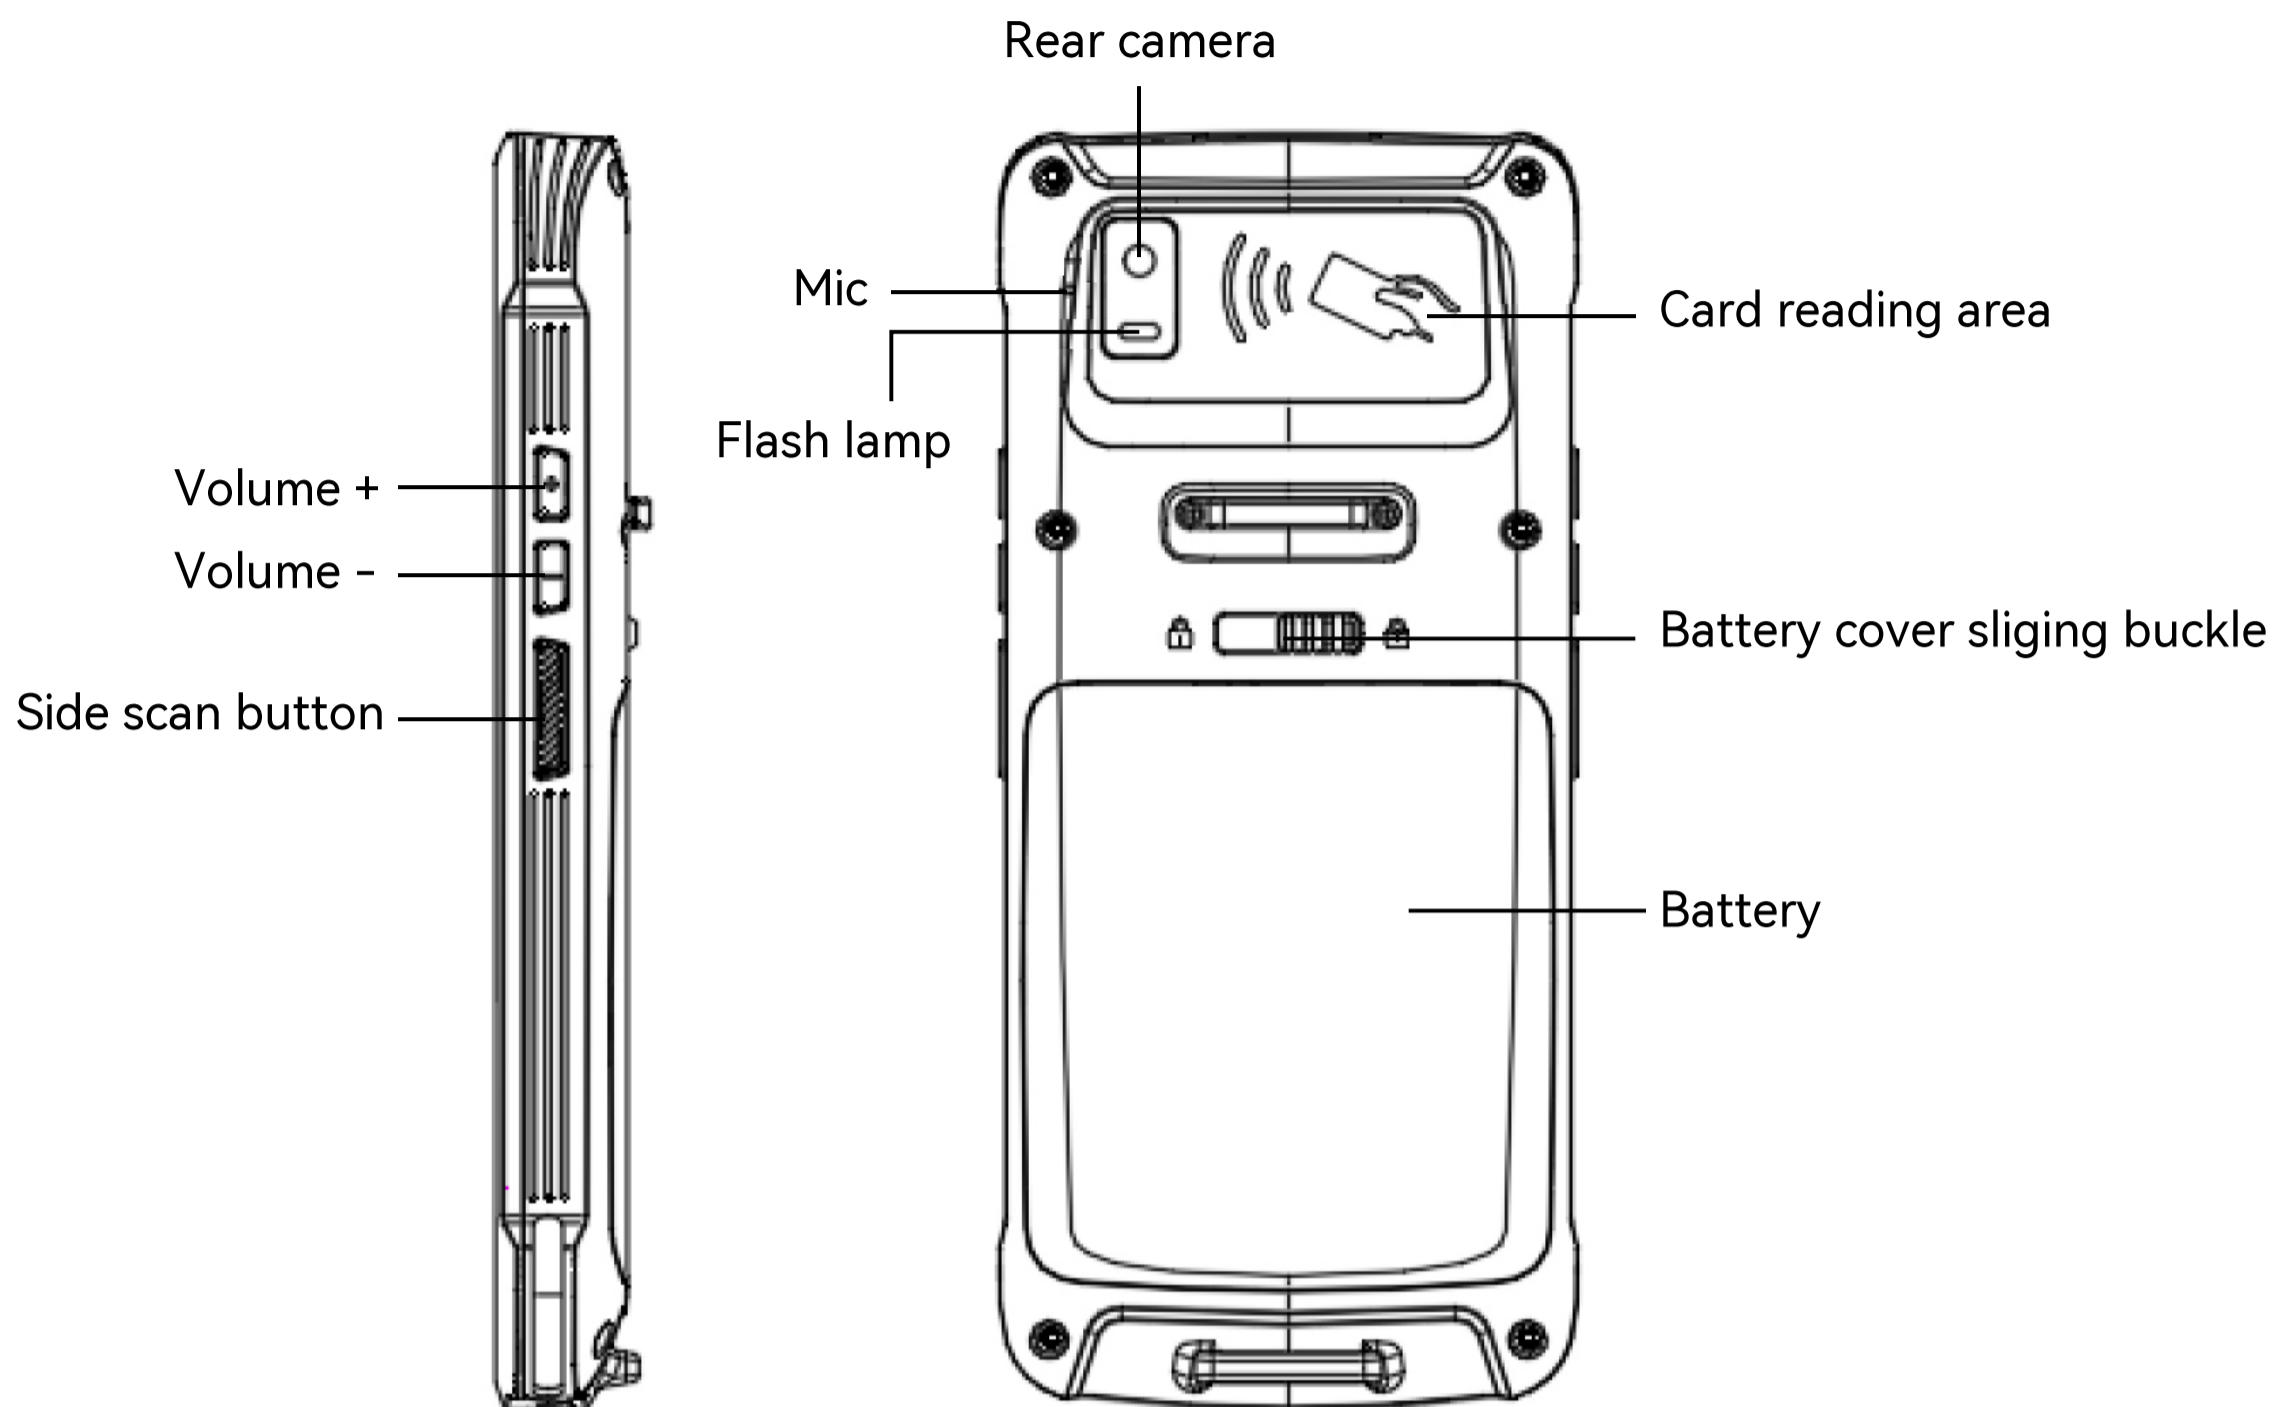


Battery

 The device has a built-in battery. You can track your battery using the icon displayed at the top right of the screen.

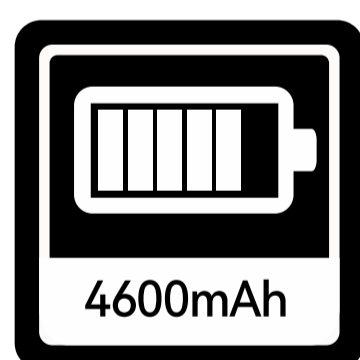

Polymer battery

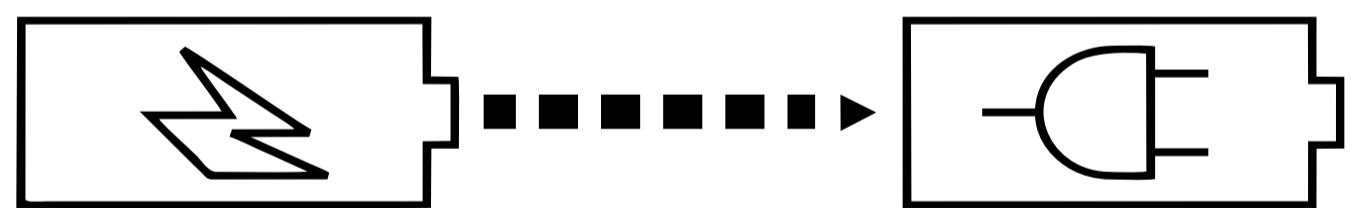 

Warning

 
- Use only safety-certified battery designed specifically for your device.
- Battery incompatibility can cause serious injury or damage to the device.
- Never place battery or device on heating equipment s such as microwave ovens, stoves or radiators. An overheated battery may cause an explosion.

Comes with the Google™ app and Google Chrome™ .

Android is a trademark of Google LLC

① How to insert the card

For more comprehensive protection of SIM card, the product uses a built-in SIM card slot design to prevent damage. The card slot should always be inserted or removed after the power is turned off. This machine uses Nano SIM card, please be sure to confirm before inserting the card. In particular, the expansion storage TF card must be installed in the shutdown state, otherwise it may cause system problems.

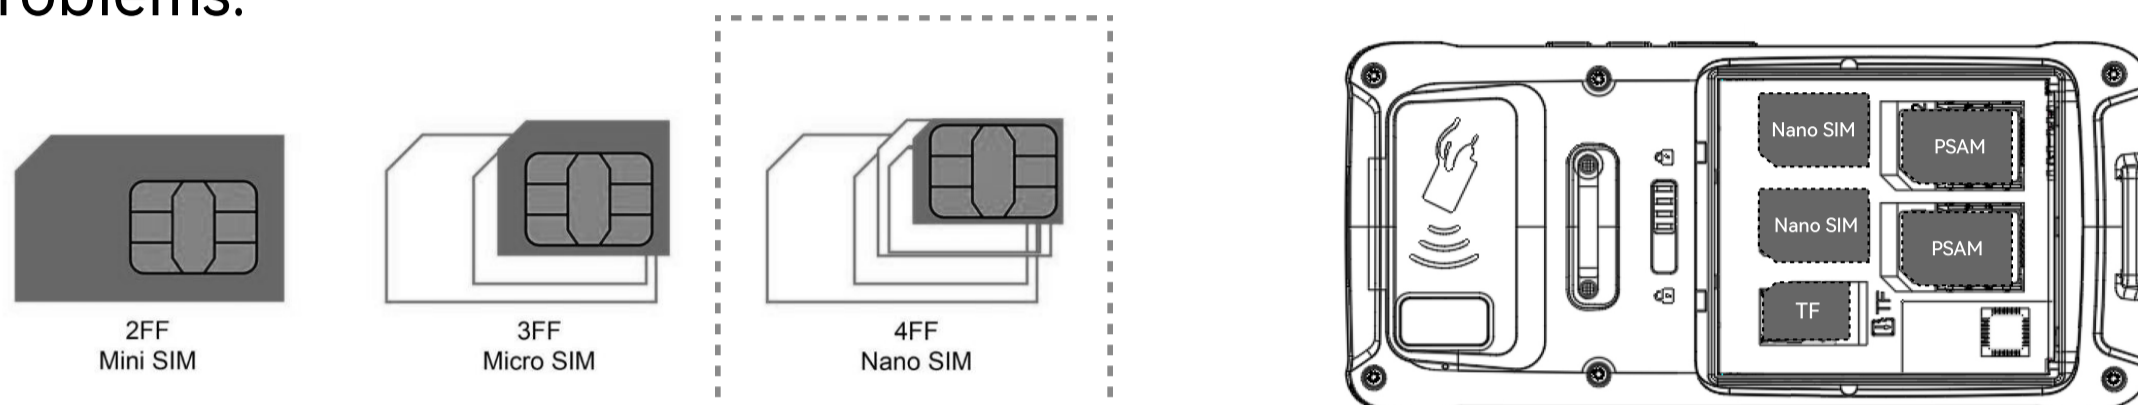

Turn off the power, slide the battery cover slider to the left, unlock it, slide the battery back down, take out the battery, place the Nano SIM card and TF memory card with the chip facing down, and make sure that the oblique angle is aligned with the oblique angle of the card slot, install the battery back, cover the back cover of the machine, and slide to the right. The battery cover slides and locks.

② How to boot

- A non-removable battery is installed inside the device.
- Long press the power button for 3-5 seconds to start.

③ How to send SMS, MMS

SMS

- Open the SMS app
- Select new information
- Enter your phone number or browse your contacts
- Select edit information and enter your text
- Send ➤

MMS

- When writing text messages, choose to add images, videos or other files you want to add, or even take new photos or videos right away.
- Select or send ➤

Comes with the Google™ app and Google Chrome™ .
Android is a trademark of Google LLC

4 Language switching settings

- Main menu --settings--system setting--language and input method
- Language and input method--language--language adding
- Select the language you need, the system will automatically
- jump back to the language interface
- Select the icon after the language bar and drag it to the first one.

5 Safety

- The maximum electromagnetic radiation absorption ratio(SAR) of this product is < 2.0W/kg
- In line with the requirements of the national standard
EN 50360:2017; EN 50566:2017; EN62209-1:2016;
EN 62209-2:2010; EN 62479:2010;

6 SAR

To ensure safe use of the product, you must strictly abide by the following rules.

- The device should be at least 15 cm away from any medical implant or adjuster and should never be carried in your coat pocket.
- Don't expose this device and other batteries to high-temperature or heating equipments such as sunlight, heaters, microwaves, ovens or water heaters. An overheated battery may cause an explosion.
- When charging is complete or not, the charger should be disconnected from the device and removed from the power outlet. Don't charge the device in an explosive environment.
- The device is equipped with a non-removable battery. Don't replace the battery by yourself to avoid damaging the battery or the device.
- Use of unapproved or incompatible power supplies, chargers or batteries may cause fire, explosion or other hazards. We are not responsible for any accident caused by non-standard charging equipment.
- Don't drop, crush, scratch, or pierce the battery. Otherwise, it may be subjected to excessive external pressure, resulting in internal short circuit and overheating.
- Don't remove or reset the battery, insert other objects and soak in water or other liquids.

Comes with the Google™ app and Google Chrome™ .
Android is a trademark of Google LLC

7 Precautions for battery maintenance

- When the device is not in use for a long time, the battery capacity shall not be lower than 80%, especially when it is stored in low temperature in winter, and a complete charge and discharge shall be carried out once a month.
- When the battery is lower than 30%, charge it in time. The charging time is generally 4-8 hours. When the charger is not in use, remove it from the power socket.
- Don't connect a permanently charged battery to a charger, as overcharging can shorten battery life. Please handle the device gently when charging and wiring data transmission. Don't operate the device at this time except under special circumstances to avoid short circuit of the socket and damage to the control chip.
- Don't charge the device in a damp, flammable or explosive environment. Reasonable charge and discharge can prolong battery life.

8 Additional notes

- Fully understand the maintenance of the device to use it more safely and efficiently, and extend the service life of the device as far as possible.
- Please follow the instructions in the manual to open the device, remove the accessories, and don't try other methods.
- Please avoid falling, knocking or shaking the device. Rough handling of the device can cause the screen to crack, damaging internal circuit boards and fine construction.
- Don't use chemical solvents or detergents to clean your device. Wipe the phone case with a soft cotton cloth with water or mild soap.
- Clean lenses (e.g. camera lenses and screens) with a clean, dry and soft cloth.
- If an abnormal fault such as a collision occurs during the use of the device, the solution is as follows: press the power button for more than 12 seconds. The device forcibly restarts (unlocking the device upon restart).
- The touch screen of the device can be used normally in air and fog environment, but the sensitivity will be reduced in rain and snow environment.
- Don't use the device in heavy rain or snow except under special circumstances.
- After using the device in rainy or snowy weather, remove water on the surface and dry it in a cool place.
- In a strong light working environment, change the automatic brightness adjustment to manual brightness adjustment and maximum brightness adjustment. After the maximum brightness adjustment, there will be obvious heating and the working life will be significantly shortened. Please adjust the brightness of the display properly.
- Standard packaging of this product (mobile phone protective film, USB data cable, charger).

Comes with the Google™ app and Google Chrome™ .
Android is a trademark of Google LLC



Shenzhen SOTEN Technology Co., LTD
ADD:10F,B#2,Piovan Research Building ,
No.5158 Shahe West Road, Nanshan,Shenzhen,China 518055
Phone: +86(0755)-61885156 61827963
Fax: +86(0755)-61827963
Web:www.soten.com.cn
FAE: fae@soten.com.cn
Skype: sales.soten

